

XPOW6200 Driver Manual

Power Measurement 6200 ION Protocol Driver



CPKSoft Engineering Process Monitoring and Industrial Automation Software

Copyright 1990-2008, CPKSoft Engineering. All rights reserved.

Index

1.	Introduction	3
2.	Driver details	4
2.1.	Driver overview	4
2.2.	Supported devices.....	4
3.	Command list	5
3.1.	Read Real-Time Measured Data.....	5
3.2.	Read Real-Time Measured Data (XPOW3300 emulation)	6
3.3.	Read KW Demand Total (XPOW3300 emulation)	7
4.	Appendices	9
4.1.	Error messages	9
4.2.	Keywords list.....	9

1. Introduction

CPKSoft Engineering assumes no responsibility for any errors that may appear in this document. If you have any suggestions for improvements or amendments or have found errors in this publication, please notify us.

This driver is included with all unlimited licenses of TAS-HMITalk. It is not sold separately. It requires the TAS-HMITalk ActiveX to work, therefore it cannot be used as a stand-alone driver.

If you use this driver in your applications, you need to include the xpow6200.tlk in the set of files that you distribute. This file must be located in the same folder where the hmitalk.ocx file is registered in order to be found by the activex when the applications are executed.

The source-code for the xpow6200.tlk driver is available in plain-C language for additional USD 299 if you own a license of TAS-HMITalk 8.04 or higher.

Refer to the following link to visit the xpow6200 driver page at CPKSoft Engineering website: <http://www.cpksoft.com/tabid/55/ProductID/79/PageIndex/1/Default.aspx>.

Visit this link if you want to see a complete list of drivers that are currently available for TAS-HMITak: <http://www.cpksoft.com/Drivers/tabid/55/Default.aspx>.

Also, refer to this link if you are interested in purchasing a license of the most recent version of TAS-HMITalk: <http://www.cpksoft.com/Products/tabid/54/Default.aspx>.

We welcome your comments about this document. You can reach us by e-mail at [contact @ cpksoft.com](mailto:contact@cpksoft.com).

2. Driver details

2.1. Driver overview

XPOW6200 driver allows you to connect with POWER MEASUREMENT 6200 ION Power Meter Series. The link is established using the 6200 ION/Modicon Modbus Serial Communications Protocol using the ION/Modbus Register Map.

This driver includes one global command that can be used to read the most relevant variables from the PML 6200 ION. If you need to read other parameters or write any information to the device, consider using the XMODBUS driver (modbus binary protocol) which is also supported by this Power Measurement family.

Typical communication settings:

9600, N, 8, 1 or 9600, N, 8, 2 CommHoldRTSWhileTransmitting = On (If using RS-232/485 converter) CommHoldRTSWhileReceiving = On (If using RS-232/485 converter)

Power meter required scale factors settings:

PVS = 1 PIS/PCS = 1 PI4S/PC4S = 1 PPS = 1

2.2. Supported devices

This driver can communicate with these devices, but is not necessarily limited to this list:

POWER MEASUREMENT ION 6200 Power Meter

3. Command list

3.1. Read Real-Time Measured Data

Description of this command:

This command retrieves the most relevant measured values from the 6200 ION real-time memory. All scale factors must be set to 1.

Type of data handled by this command:

Analog Input

Number of points accepted by this command:

1-49

Meaning of the DriverP0 parameter:

Unit Address (1-32)

Meaning of the DriverP1 parameter:

1

Meaning of the DriverP2 parameter:

Not used

Meaning of the DriverP3 parameter:

Not used

Meaning of the DriverP4 parameter:

Not used

Values that are returned:

Value in PointValue (0) = Vln a, in V
Value in PointValue (1) = Vln b, in V
Value in PointValue (2) = Vln c, in V
Value in PointValue (3) = Vln avg, in V
Value in PointValue (4) = Vll ab, in V
Value in PointValue (5) = Vll bc, in V
Value in PointValue (6) = Vll ca, in V
Value in PointValue (7) = Vll avg, in V
Value in PointValue (8) = I a, in A
Value in PointValue (9) = I b, in A
Value in PointValue (10) = I c, in A
Value in PointValue (11) = I avg, in A
Value in PointValue (12) = I demand, in A
Value in PointValue (13) = I peak demand, in A
Value in PointValue (14) = I4, in A

Value in PointValue (15) = Frequency, in Hertz x 100
Value in PointValue (16) = PF sign total, 0 to 1.0
Value in PointValue (17) = PF sign a, 0.0 to 1.0
Value in PointValue (18) = PF sign b, 0.0 to 1.0
Value in PointValue (19) = PF sign c, 0.0 to 1.0
Value in PointValue (20) = kW total, in kW
Value in PointValue (21) = kVAR total, in kW
Value in PointValue (22) = kVA total, in kW
Value in PointValue (23) = kW a, in kW
Value in PointValue (24) = kW b, in kW
Value in PointValue (25) = kW c, in kW
Value in PointValue (26) = kVAR a, in kW
Value in PointValue (27) = kVAR b, in kW
Value in PointValue (28) = kVAR c, in kW
Value in PointValue (29) = kVA a, in kW
Value in PointValue (30) = kVA b, in kW
Value in PointValue (31) = kVA c, in kW
Value in PointValue (32) = kW demand, in kW
Value in PointValue (33) = kW peak demand, in kW
Value in PointValue (34) = kVAR demand, in kW
Value in PointValue (35) = kVA demand, in kW
Value in PointValue (36) = kVAR peak demand, in kW
Value in PointValue (37) = kVA peak demand, in kW
Value in PointValue (38) = kWh del, in kW
Value in PointValue (39) = kWh rec, in kW
Value in PointValue (40) = kVARh del, in kW
Value in PointValue (41) = kVARh rec, in kW
Value in PointValue (42) = kVAh del+rec, in kW
Value in PointValue (43) = V1 THD
Value in PointValue (44) = V2 THD
Value in PointValue (45) = V3 THD
Value in PointValue (46) = I1 THD
Value in PointValue (47) = I2 THD
Value in PointValue (48) = I3 THD

3.2. Read Real-Time Measured Data (XPOW3300 emulation)

Description of this command:

This command emulates some of the values returned by the Read Real-Time Measured Data command used by the PML 3300 Power Measurement meter. All scale factors must be set to 1.

Type of data handled by this command:

Analog Input

Number of points accepted by this command:

1-184

Meaning of the DriverP0 parameter:

Unit Address (1-32).

Meaning of the DriverP1 parameter:

0

Meaning of the DriverP2 parameter:

0

Meaning of the DriverP3 parameter:

0

Meaning of the DriverP4 parameter:

0

Values that are returned:

- PointValue(10) = Van (Vln a from the 6200 meter), in V
- PointValue(11) = Vbn (Vln b from the 6200 meter), in V
- PointValue(12) = Vcn (Vln c from the 6200 meter), in V
- PointValue(14) = Vab (Vll ab from the 6200 meter), in V
- PointValue(15) = Vbc (Vll bc from the 6200 meter), in V
- PointValue(16) = Vca (Vll ca from the 6200 meter), in V
- PointValue(20) = Ia (I a from the 6200 meter), in A
- PointValue(21) = Ib (I b from the 6200 meter), in A
- PointValue(22) = Ic (I c from the 6200 meter), in A
- PointValue(33) = KW TOTAL (Kw TOTAL from the 6200 meter), in kW
- PointValue(41) = Power Factor Total (PF sign total from the 6200 meter), x 100
- PointValue(47) = Freq on V1 (Frequency from the 6200 meter), in Hertz x 100
- PointValue(54) = KWH Total (kWH imp+exp) (kWh del from the 6200 meter), in kW
- PointValue(64) = kVAH (kVAh del+rec from the 6200 meter), in kW
- PointValue(181) = Sliding Window KW Demand Total (kW demand from the 6200 meter), in kW

Important note:

Those values that are not available are returned as 0.

3.3. Read KW Demand Total (XPOW3300 emulation)

Description of this command:

This command reads the KW Demand Total using the same parameters required by the XPOW3300 driver. PPS scale factor must be set to 1.

Type of data handled by this command:

Analog Input

Number of points accepted by this command:

1

Meaning of the DriverP0 parameter:

Unit Address (1-32).

Meaning of the DriverP1 parameter:

0

Meaning of the DriverP2 parameter:

0

Meaning of the DriverP3 parameter:

2

Meaning of the DriverP4 parameter:

181

Values that are returned:

- PointValue(0) = KW Demand Total (kW Demand from the 6200 meter), in kW

4. Appendices

4.1. Error messages

The following list shows all the possible error messages that can be returned by the protocol driver during a failed communication in the 'DriverStatus' property.

This list does not include some error messages that can be returned by the activex component while attempting to establish a connection.

- [1005] DRIVER (Internal): Invalid driver stage
- [1300] PROTOCOL (Timeout): No answer
- [1421] PROTOCOL (Format): Negative acknowledge received from device
- [2001] CONFIG (DataType): Analog outputs are not supported by this driver
- [2002] CONFIG (DataType): Digital inputs are not supported by this driver
- [2003] CONFIG (DataType): Digital outputs are not supported by this driver
- [2175] CONFIG (NumValues): Too many values (max=1)
- [2203] CONFIG (NumValues): Too many values (max=250)
- [2222] CONFIG (NumValues): Too many values (max=49)
- [3025] CONFIG (P0): Invalid device address (1-32)
- [3510] CONFIG (P1): Invalid command (0 or 1 only)
- [4552] CONFIG (P3): Invalid page
- [8013] CONFIG (Remote): Acknowledge
- [8034] CONFIG (Remote): Busy (rejected message)
- [8138] CONFIG (Remote): Failure in associated device
- [8168] CONFIG (Remote): Illegal data address
- [8170] CONFIG (Remote): Illegal data value
- [8172] CONFIG (Remote): Illegal function
- [8347] CONFIG (Remote): Unknown error

4.2. Keywords list

The following list shows a set of words directly related to this driver.

"6200, ION, MEASUREMENT, Meter, POWER".